

Dining Room Sound System Instructions

This sound system is now a multi-component system; the sound board/amplifier now sends unamplified signals to powered speakers on the wall in the dining area and amplified signals to a speaker in the kitchen.

Please perform these steps in order to turn on systems:

- 1. Turn on the power strip to power up the sound board/amplifier, then**
- 2. Plug in the 2 powered speakers that are mounted on the dining room wall.**

The feed for the dining room is actually now the “Monitor Master” channels (turquoise knobs). Use the individual knobs on each channel to raise or lower that item’s volume level. Use the “Monitor Main” knob to turn up all the feeds.

There is now a speaker in the kitchen that operates off of the bottom (red) knobs and the “Master” volume.

When turning off the system after your event, reverse the order and unplug the speakers before you turn off the power strip (board power).

You can leave the plug strip turned on and the speakers plugged in (turned on) overnight during weekend events.

For best results, please use “direct boxes” when connecting instruments to the system.

Thanks

ARC Management